DANVER

MOBILE KITCHEN CART

AND COCINA

ASSEMBLY INSTRUCTIONS



LIMITED 5 YEAR WARRANTY


Danver warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers five years from date of original purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included.


This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Liability for consequential damages is excluded to the extent exclusion is permitted by law. This warranty gives you specific legal rights. Additional warranty rights may be provided by law in some areas.


To obtain warranty services, purchaser must present **original bill of sale**. Components repaired or replaced are warranted though the remainder of the original warranty period only. The defective components will be repaired or replaced without charge, subject to the terms and conditions described above.

PARTS LIST

Description		Qty
A.	Top*	1
В.	Front/Back Skirt	2
C.	Towel Bar Skirt**	1
D.	Utensil Hanger Skirt	1
E.	Legs	4
F.	Shelves	2
G.	Towel Bar**	1
H.	Casters	4
I.	Utensil Hanger Hook	3
J.	Small Screw & Nut	24
Κ.	Large Screw & Washer	2
	(Located in handle)	
L.	#10 Screw***	10

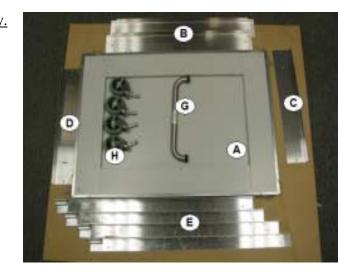

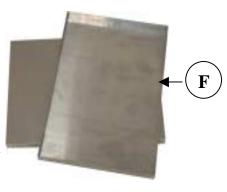

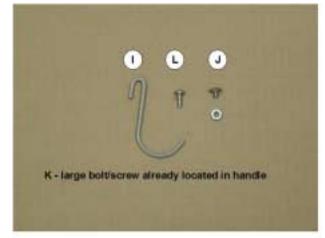

*The top shown in these assembly instructions is shown as a butcher block. Danver does not provide tops other than stainless steel, but any cart can be ordered without a top so that you may install a custom top of your choice . #10 screws not provided for topless carts.

** C0322 model only

***Holes for screws are small to maintain proper screw bite into backer material


ASSEMBLY Step 1) – Top & Skirt


- Pre-drill hole if needed, 1/8" dia. x 1" deep maximum. Only drill the hole for the optional drawer (if needed).
- Items needed: Top (A), Front & Back skirts (B), Handle bar skirt (C), Tool hanger skirt (D) and #10 screws (L).
- Place Top (A) top side down on a soft flat surface such as carpet or towels. (Fig- 1)
- Place the short side of the Front skirt (B) on the underside of the Top (A) with the skirt long side facing the outer edge of the Top (A).
- Use a Phillips head screwdriver and 3-#10 screws (L) to fasten the skirt to the Top (A). Repeat for the Back skirt. (Fig-2)
- Fasten the Handle bar skirt (C) and the Tool hanger skirt (D) to the Top (A) with 2-#10 screws (L) for each skirt.

Step 2) Towel Bar (C3022 only)

- Items needed: Towel bar (G) and Large screw and washer (K) (located in handle)
- Place the washer on the larger screw. There are two large screws and washers one for each hole in the side of the Towel bar skirt. (Fig. 3)
- Place one screw through one hole in the skirt from the inside. Align the screw with one end of the Towel bar and screw-in two or three turns. Repeat for the other end. (Fig. 4)
- Tighten both screws with a Phillips head screw driver.



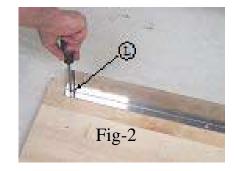

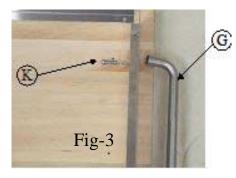




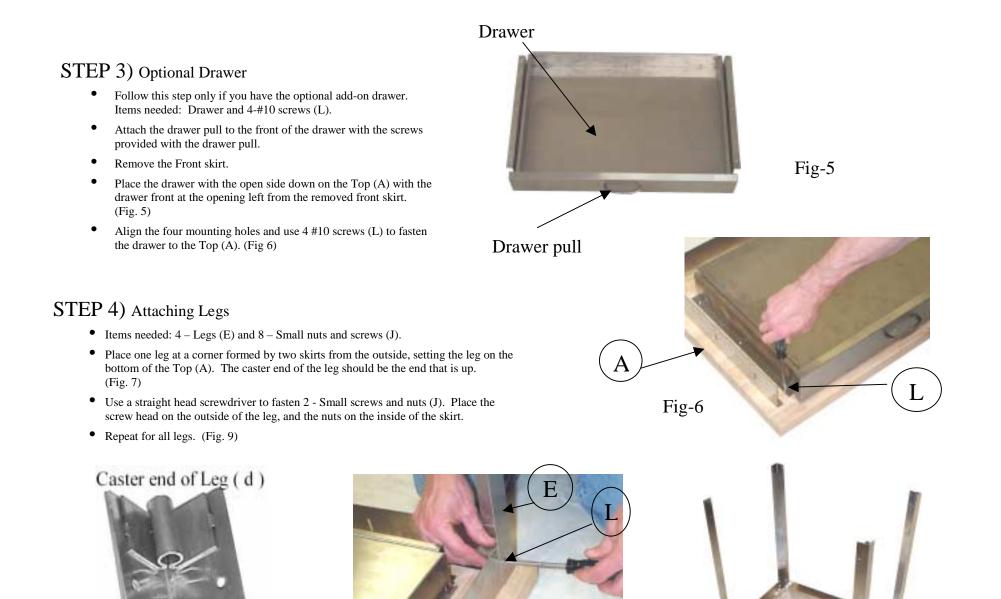


Fig-8

Fig-9

STEP 5) Middle Shelf

- Items needed: 1- Shelf (F) and 6-Small screws and nuts (J).
- Place the cart onto one side. (Fig. 10)
- Place one Shelf in the middle of the legs with the open side facing the caster end of the legs. Align the holes in the shelf with the middle holes in the legs. (Fig. 11)
- Use 2- Small screws and nuts (J) to fasten the shelf to the legs. **Note**: do not try to fasten a screw and nut through the holes that are blocked by the floor. Place the screw from the outside of the legs and the nut from the inside of the shelf.

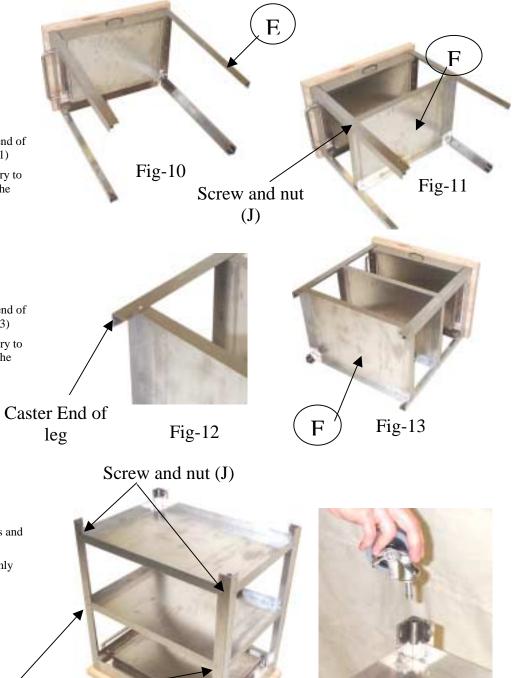

STEP 6) Lower Shelf

- Items needed: 1- Shelf (F) and 6-Small screws and nuts (J)
- Place second Shelf at the end of the legs with the open side facing the caster end of the legs. Align the holes in the shelf with the middle holes in the legs. (Fig. 13)
- Use 2- Small screws and nuts (J) to fasten the shelf to the legs. Note: do not try to fasten a screw and nut through the holes that are blocked by the floor. Place the screw from the outside of the legs and the nut from the inside of the shelf. (Fig. 12)

STEP 7) Shelf Screws and Caster

- Items needed: 4-Small screws and nuts (J) and 4- Casters (H)
- Place the cart with the Top (A) down. (Fig. 14) Fasten the 4 remaining screws and nuts to the Legs and Shelves.
- Insert the stem end of the caster into the hole at the end of each leg. Press firmly (DO NOT HIT) until it seats. (Fig. 15)


Screw and nut (J)

Fig-14

STEP 8) Utensil Hangers

- Items needed: 3-Utensil hangers (I).
- Move the caster lock into the lock position. Carefully flip the cart onto the casters. Unlock the casters.
- Align and hang the small loop of the Utensil hanger hook with the oblong opening in the Utensil hanger skirt.
- View the completed cart. If your cart looks "Out of square", loosen the small screws and nuts (J) fastening the legs and adjust until square and tighten. (Fig. 17)

Enjoy your new cart

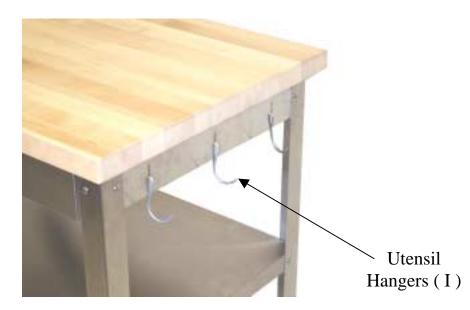





IMPORTANT INFORMATION

- **DO NOT** climb on unit.
- **DO NOT** step or sit on shelves or drawers.
- Read and follow all assembly instructions.
- Check the parts list to make sure all parts are included and in good condition.
- Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.
- Work in a spacious area, preferably on a carpet or rug.
- Have the following tools close at hand: One medium sized straight point screwdriver, one medium sized phillips head screwdriver and one pair of pliers.



• To clean the product, use your favorite general purpose cleaner and a soft cloth. DO NOT USE harsh chemicals or abrasive pads or cleaners.

CARE FOR YOUR STAINLESS STEEL TOP

Stainless Steel Tops

Use your favorite general-purpose cleaner or Stainless Steel polish on your Stainless Steel top. Follow the directions for applying your chosen cleaning product. The use of scouring powder or abrasive pads is not advised.